




Canon PowerShot A4000 IS Display Replacement

This guide demonstrates how to remove the LCD screen of your PowerShot camera.

Written By: Ansley Gardner



Step 1 — Removing the Screws

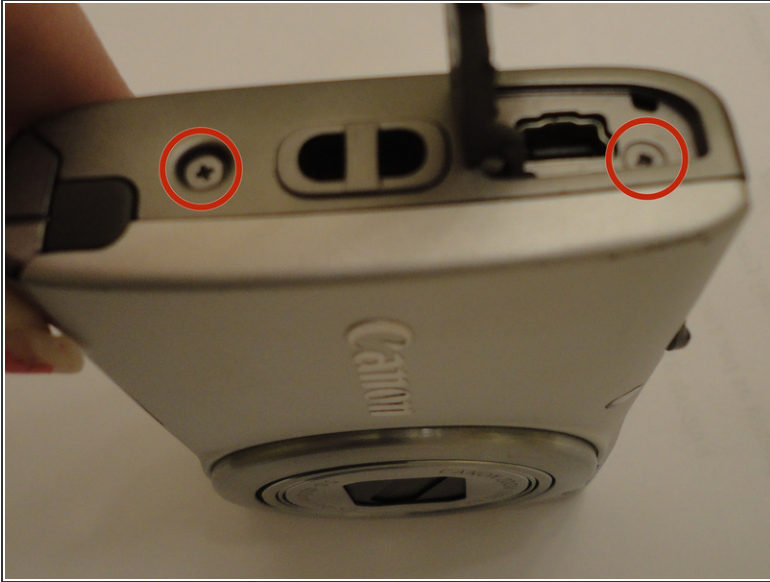


- First remove the batteries and memory card.
- Remove the screws for the back cover (circled in red) with a Phillips head screwdriver (PH000) .

Step 2 — Removing the Back Cover




- The back cover can be gently pried off after the screws are removed.

Step 3 — Disconnecting the Screen Frame from the Camera

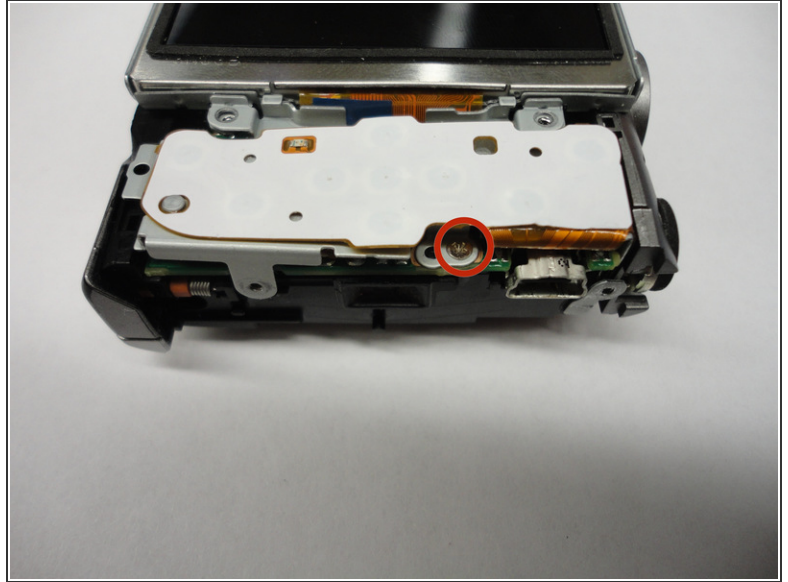


- Remove the three screws outlined in the pictures.

Step 4

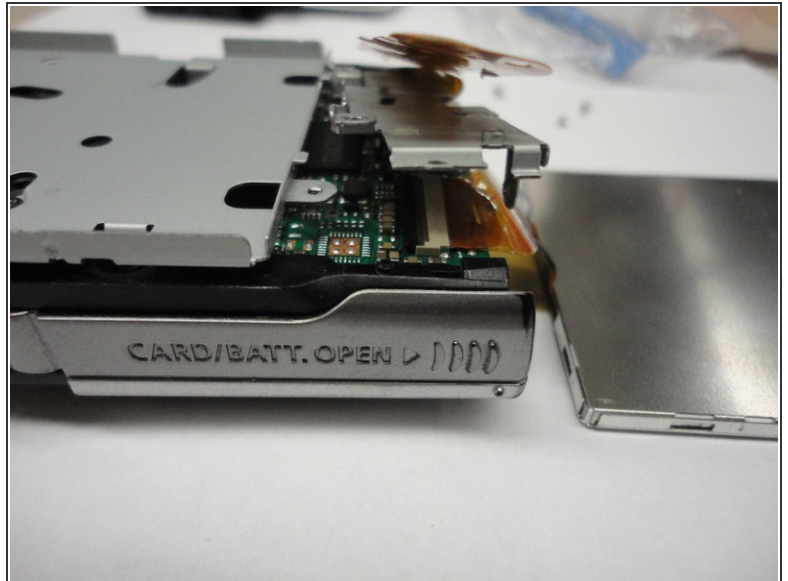

- The ribbon for the screen is folded under the plate. Carefully unfold the ribbon by flipping the screen face down next to the camera.
- Underneath the plate the connection between the camera and the ribbon can be viewed.

Step 5 — Disconnecting the Ribbon and Removing the Screen

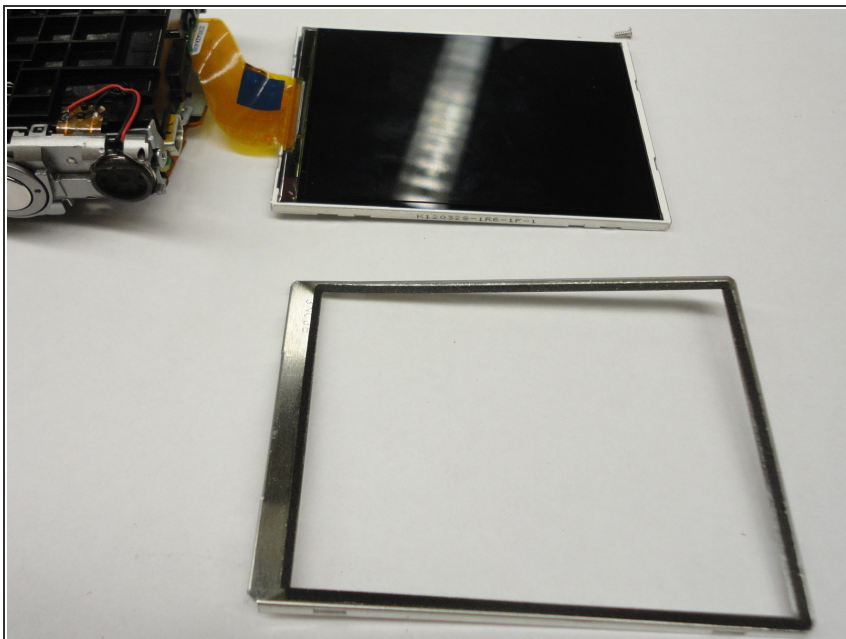

- The metal frame of the screen can be removed using a thin spatula or spudger. After the frame is removed the part of the ribbon connected to the screen is accessible.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-24 03:17:34 AM.